



PWM Technical File

Updated 5/2017

PWM Control Basics and Terminology

PWM (Pulse Width Modulated) control systems are being used widely in modern liquid applications. The use of this technology is driven by the need in agriculture for precision application of fertilizers and chemicals. The goal is to apply what is needed at the correct time while minimizing input cost, preventing runoff which may contaminate water supplies, and eliminate drift.

The PWM signal is an efficient technique to control current to a proportional electrical hydraulic valve. The PWM signal switches on and off to achieve the required control current (see Figure 1). The duty cycle “D” refers to the “on” portion of the cycle. The duty cycle can be anywhere from 0 (signal always off) to 1 (signal always on).

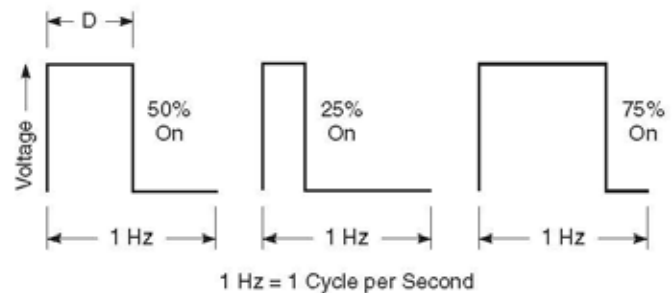


Figure 1

Dither is a rapid, small variation in the control signal designed to keep the valve spool in motion. This movement is intended to avoid **stiction** and average out **hysteresis**.

Stiction keeps the valve spool from moving when control signal changes are small. When the valve spool finally moves it can overshoot the correct position.

Hysteresis is the tendency for the spool movement to be different if the signal is increasing or decreasing. This can happen even with the identical control signal.

Valve Settings & Performance

I-Min or Minimum PWM is the minimum control current induced into the control valve. This is typically set to the point where the control signal creates a response from the valve spool. For Ace Pumps, this is typically set to the point when our pump starts to turn or where a minimum application pressure is achieved. This eliminates the **Deadband** which is typical for all control valves (see Figure 2).

I-Max or Maximum PWM is the maximum control current supplied to the control valve. This is typically set to the point where the control signal results in maximum performance. For Ace Pumps, set this to achieve the maximum shut-off pressure recommended for the pump model.

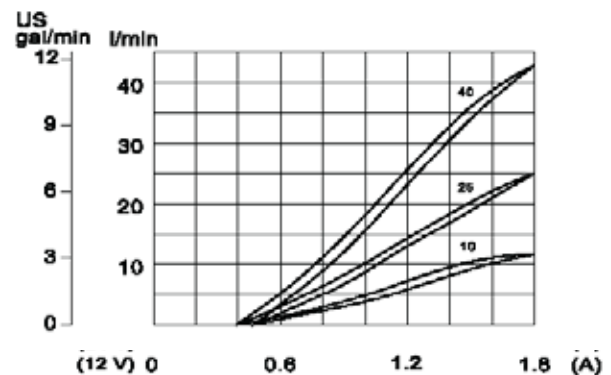


Figure 2

Typical Valve Performance Graph



PWM Technical File

Ace PWM Products



Valve Specifications:

Type.....Proportional flow control
 Normally closed
 Solenoid.....10 Volt
 Socket.....Deutsch DT04-2P
 Override.....Manual



150 SERIES

HIGH PERFORMANCE

FMCS-150F-HYD-304-PWM

FMCS-155FS-HYD-304-PWM

205 SERIES

HIGH FLOW

FMCS-205F-HYD-304-PWM

FMCS-205FS-HYD-304-PWM

Valve Specifications:

Type.....Proportional flow control
 Normally closed
 Solenoid.....12 Volt
 Socket.....Deutsch DT04-2P
 Override.....Manual





PWM Technical File

Generic PWM Setup Instructions

All PWM controllers are slightly different in the terminology used and setup procedures. Please consult your controller documentation or their technical service department for additional assistance with your specific application and implement in use.

See page 4 for specific starting controller settings for units that have been tested in our lab. The following general settings are suggested as a starting point for non-listed controllers. Every system may behave slightly different due to mounting location, hose length, application rates, etc. The setup generally requires further adjustment to fine tune operation.

Setting	Suggested Starting Value
Valve Type	Select "PWM" - If agitation is desired when application is stopped. Note: For power beyond applications an additional switch is needed to turn the pump off. Select "PWM Close" - All oil flow is stopped when the master switch is off.
Valve Calibration Number	43 or 0043 for some systems that require a 4 digit calibration number 1st digit - This is how aggressively the valve moves to make adjustments. The range is 1-9 with lower numbers being more aggressive. 2nd digit - This is the range around the set point where the valve will not change. The 3 indicates that the controller will not make adjustments if the rate is within +/- 3% of the desired setting.
PWM Frequency	122 Hz
Minimum PWM	Start at the lowest PWM setting and increase until the pump reaches the desired minimum application pressure. Set this point as the minimum PWM.
Maximum PWM	Increase the PWM setting until the maximum Shut-Off pressure per chart below is reached. Set this point as the maximum PWM

SHUT-OFF PRESSURE

Shut-off pressure is the liquid pressure at the pump discharge with all flow turned off. This means closing the boom, agitation, and any by-pass valves. It is the highest pressure a centrifugal pump will achieve for a given RPM and relates directly to the flow of hydraulic oil. A pressure gauge must be located between the pump discharge and the shut off valves.

Maximum Shutoff Pressure:

FMC-75-HYD	100 PSI	FMCS-155FS-HYD	120 PSI
FMC-HYD	100 PSI	FMCS-150SP-HYD	120 PSI
FMC-150-HYD	120 PSI	FMCS-205F-HYD	120 PSI
FMC-150F-HYD	120 PSI	FMCS-205FS-HYD	120 PSI
FMC-150FS-HYD	120 PSI		

Important:

The manual override on the valve must be disabled for proper operation:

Gemini - See Gemini Operating Instructions for details.

All HYD-304-PWM Models - Turn knob under valve cap counterclockwise until it stops.



PWM Technical File

Recommended PWM Starting Settings

PWM Controller	Valve Type	Valve Cal	PWM Freq.	Notes/Other
Raven SCS Consoles SCS 440, 450, 460, 660, 660M	PWM	43	122 Hz	
Raven CAN & ISO Systems	PWM	43	122 Hz	Activate PWM Smart Control PWM Standby standard Optional Pressure Standby requires transducer
Raven Hawkeye - Viper 4	PWM	Default	122 Hz	Pressure Min, Max, and Target Valve Cal = Response Rate Number

* This section will be update with additional controllers as the compatibility is determined.

General Notes:

Some controllers have an automatic calibration procedure which simplifies system setup. See your controller documentation for the suggested setup procedure.

Some controllers allow an intermediate PWM setting which is closer to the normal operating point rather than minimum PWM. This allows the controller to reach the application rate more quickly.

Some controllers have a smart or learning feature that automatically adjusts settings based on valve and system performance. This features should be activated if available.

A signal boosting device may be needed for some applications. This may be needed due to low voltage, long wires, or controller specifications.

Troubleshooting:

Symptom: Unstable water flow

Solution: Switch the controller to manual mode which sends a constant PWM signal to the valve. If the surging stops, the issue is related to the controller, controller settings, or PWM control valve. If the surging continues, review the proper hydraulic setup steps and plumbing to see if there is some other system issue.